

Notice: Android must be V1.5 or above.


Step1 : Enter into Market function of Android



Step 2: Type "SuperCam" to search. Click the software when you get it.




Step 3: Click "INSTALL" to download and install.

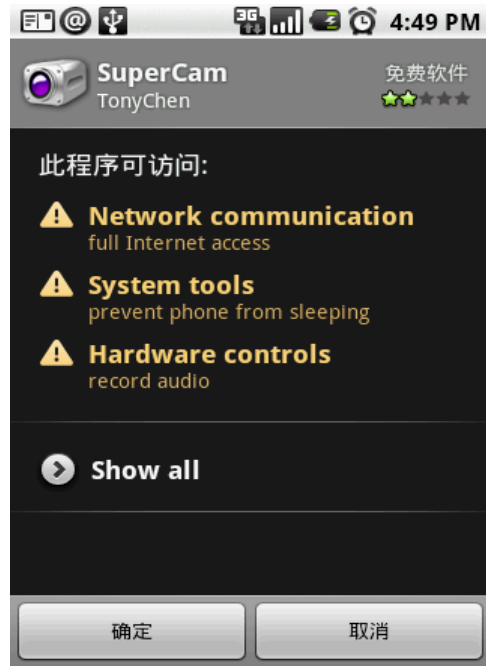


Step 4: After finished, you will find the software on your phone.



Step 5: Click the software, type the server address, ID and password.

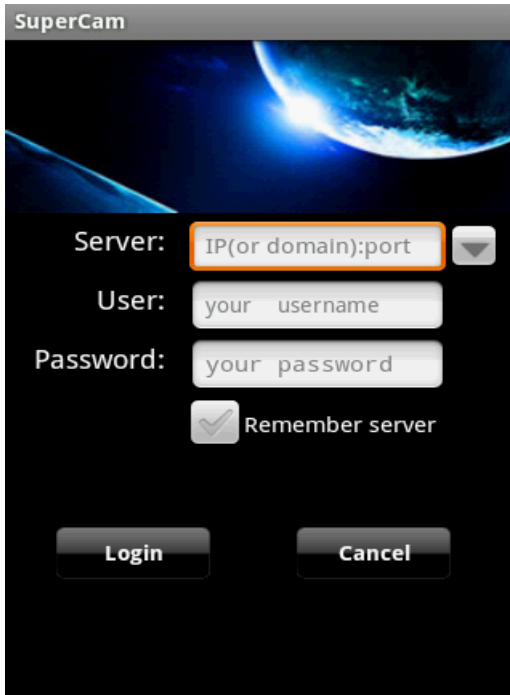

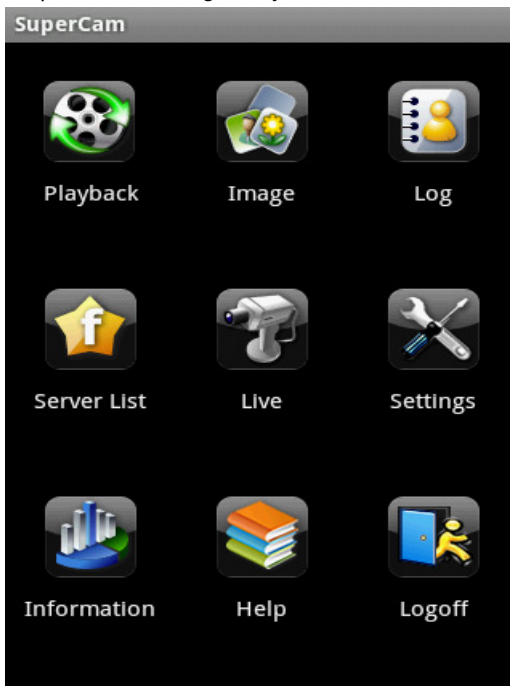


Step 6: Click "Login" , you will enter the function interface.



Playback: play the video recorded on the phone  
 Log: check the event log saved on the phone  
 Live: remote live view  
 Information: about the remote DVR and your phone.

Image: check the pictures saved on the phone  
 Server list:: the servers you accessed and saved  
 Settings: some settings on your phone

Step 7: Click Live to view. The default is camera1. Click  to record video. Click  to capture picture. Click  to enter PTZ mode.



1	Current camera number	2	Camera indicators
	Change cameras		Enter PTZ control
	Snap		Record on your phone
	Two way voice		Open audio
	Full screen		Return
	PTZ up		PTZ down
	PTZ left		PTZ right
	PTZ pauze		Zoom In/Focus In/Iris Add
	Zoom Out/Focus Out/Iris Sub	Preset	Preset
Group	Cruise		